

1. Remove the old valve. Ensure that the installation plate fits well into the hole. If the hole is round and diameter is 95-100 mm, the installation plate may not be necessary.
2. If you are using the installation glue should be spread in a continuous line along the entire length of the cover plate to prevent leaks.
3. Press the installation plate firmly against the wall and hold it until the glue sets.
4. Place the filter frame wires (2 pieces) into the holes at the back of the valve, opposite each other. If necessary, you can bend or shorten the wires. Install the filter according to the filter instructions (see instructions on the reverse side). Check that the sealing ring is in the position indicated in the valve manual section 4.
5. Install the valve in the pipe. If necessary, rotate the valve body in the pipe so that the valve seals well in place.
6. Finally, adjust the valve according to the adjustment instructions (see instructions on the reverse side).

