Sarne Aa- trickle vent filter replacement instructions

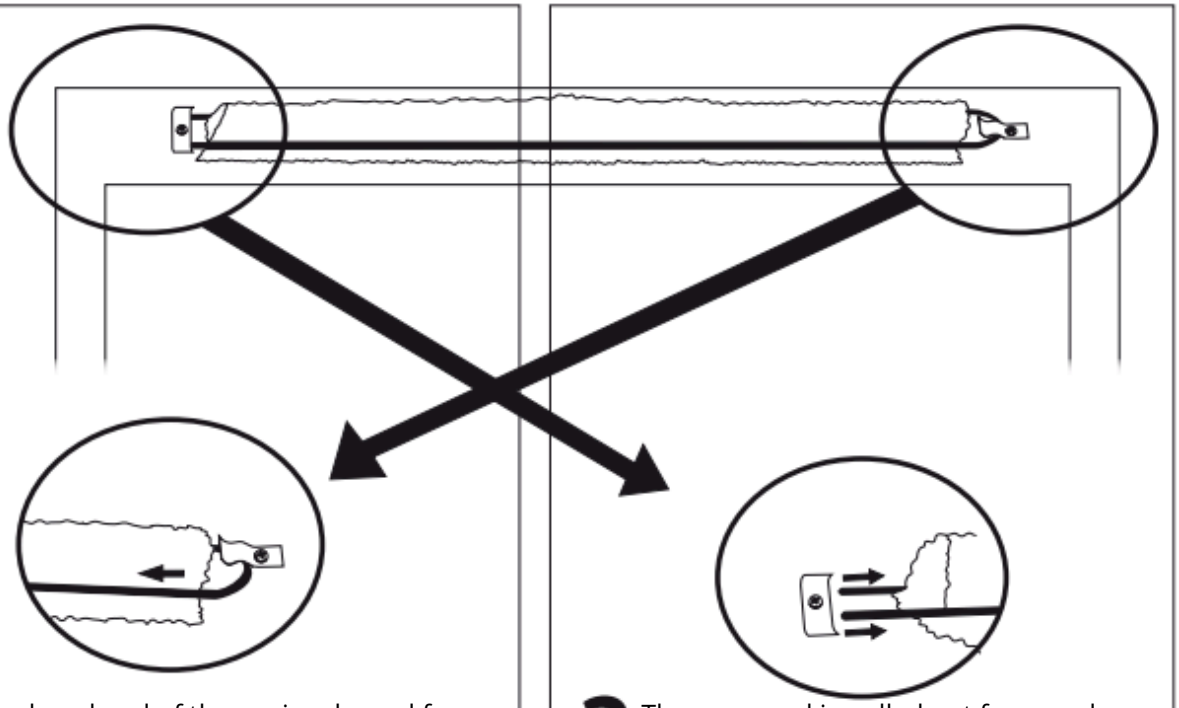

1 The closed end of the arc is released from the holder by pulling the filter away.

2 The open end is pulled out from under the bridge-like holder.

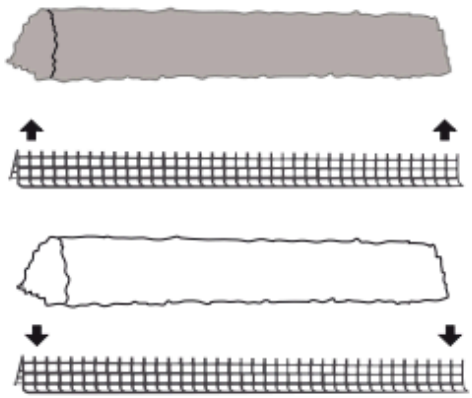

3 Replace the dirty filter with a clean one.

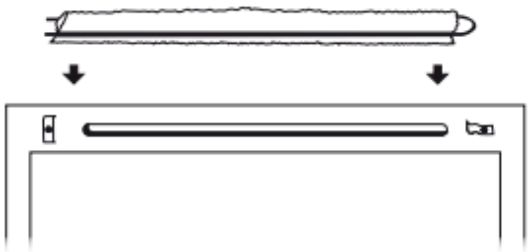

4 Place the filter and the grid.

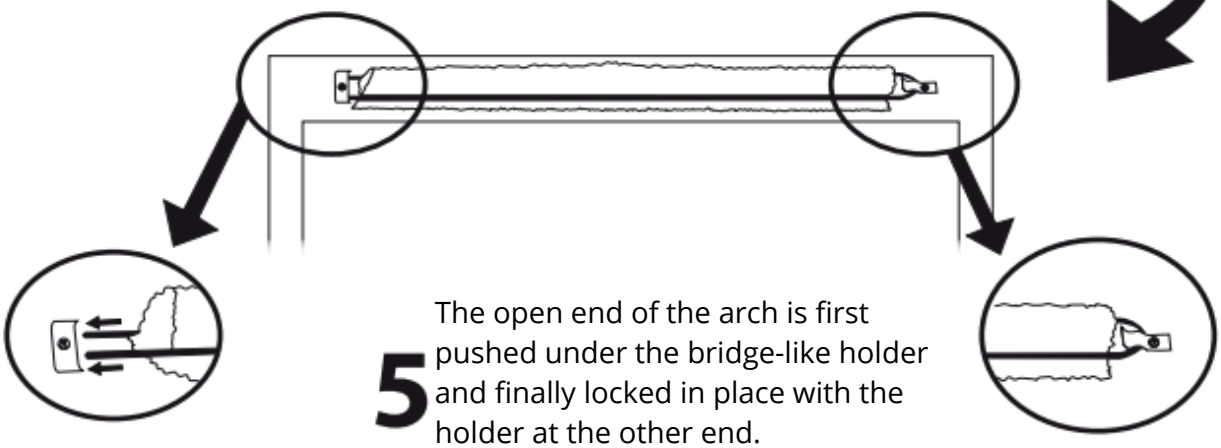

5 The open end of the arch is first pushed under the bridge-like holder and finally locked in place with the holder at the other end.